


Use Momentary/
Normally Open
Contact/Relay

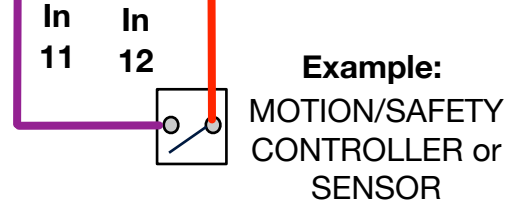

Use caution with the 5V. It is the main power supply of the controller

HOLD - Used to hold door open when using AUTOCLOSE MODE. Maintain Contact #4 to HOLD OPEN