



Dado Door Bi Part Install Info


Mount
Wood
Clamps
On door TOP
Using #8/9/10
Screws 4" length.

1.5" from edge
Of door.

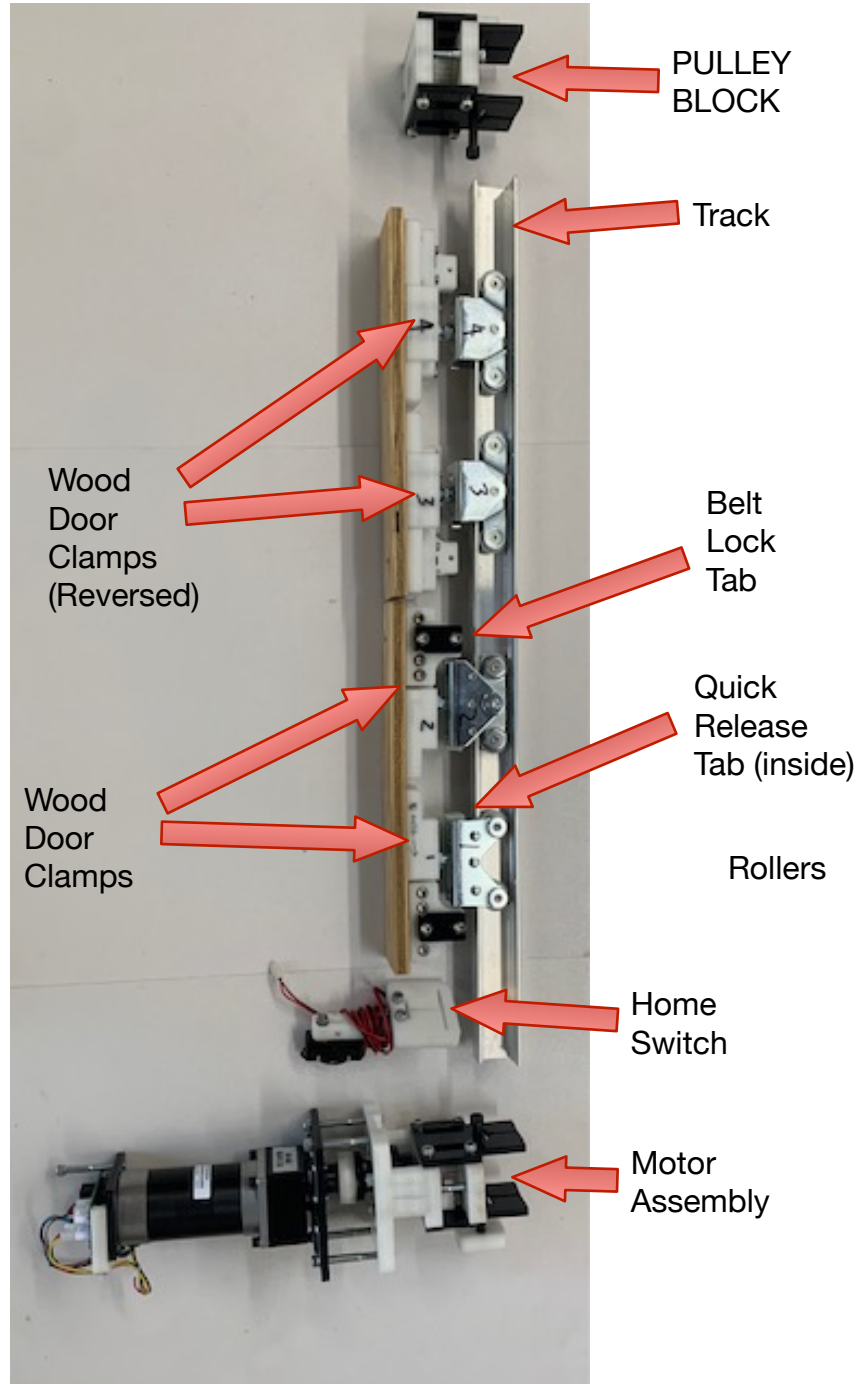

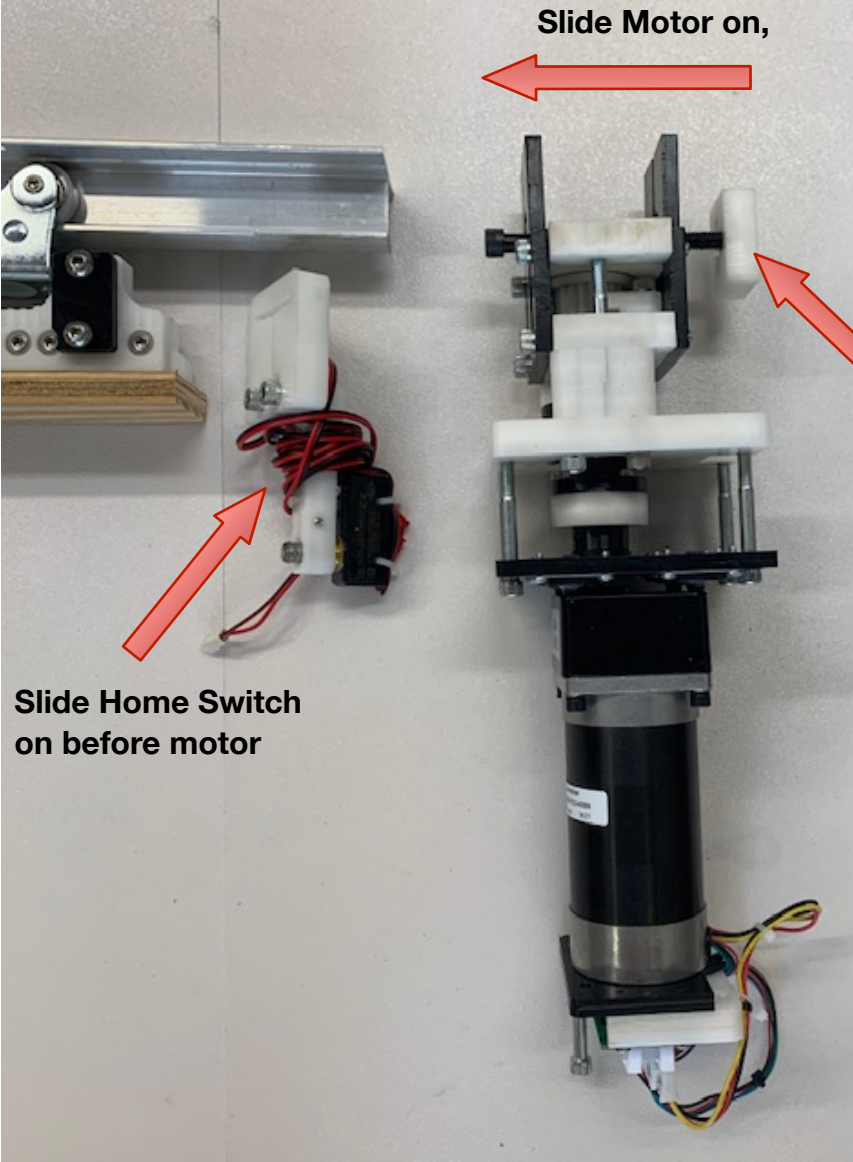


Slide Motor on,




**Slide Home Switch
on before motor**




**Tension
Nut
Fits on
Track**

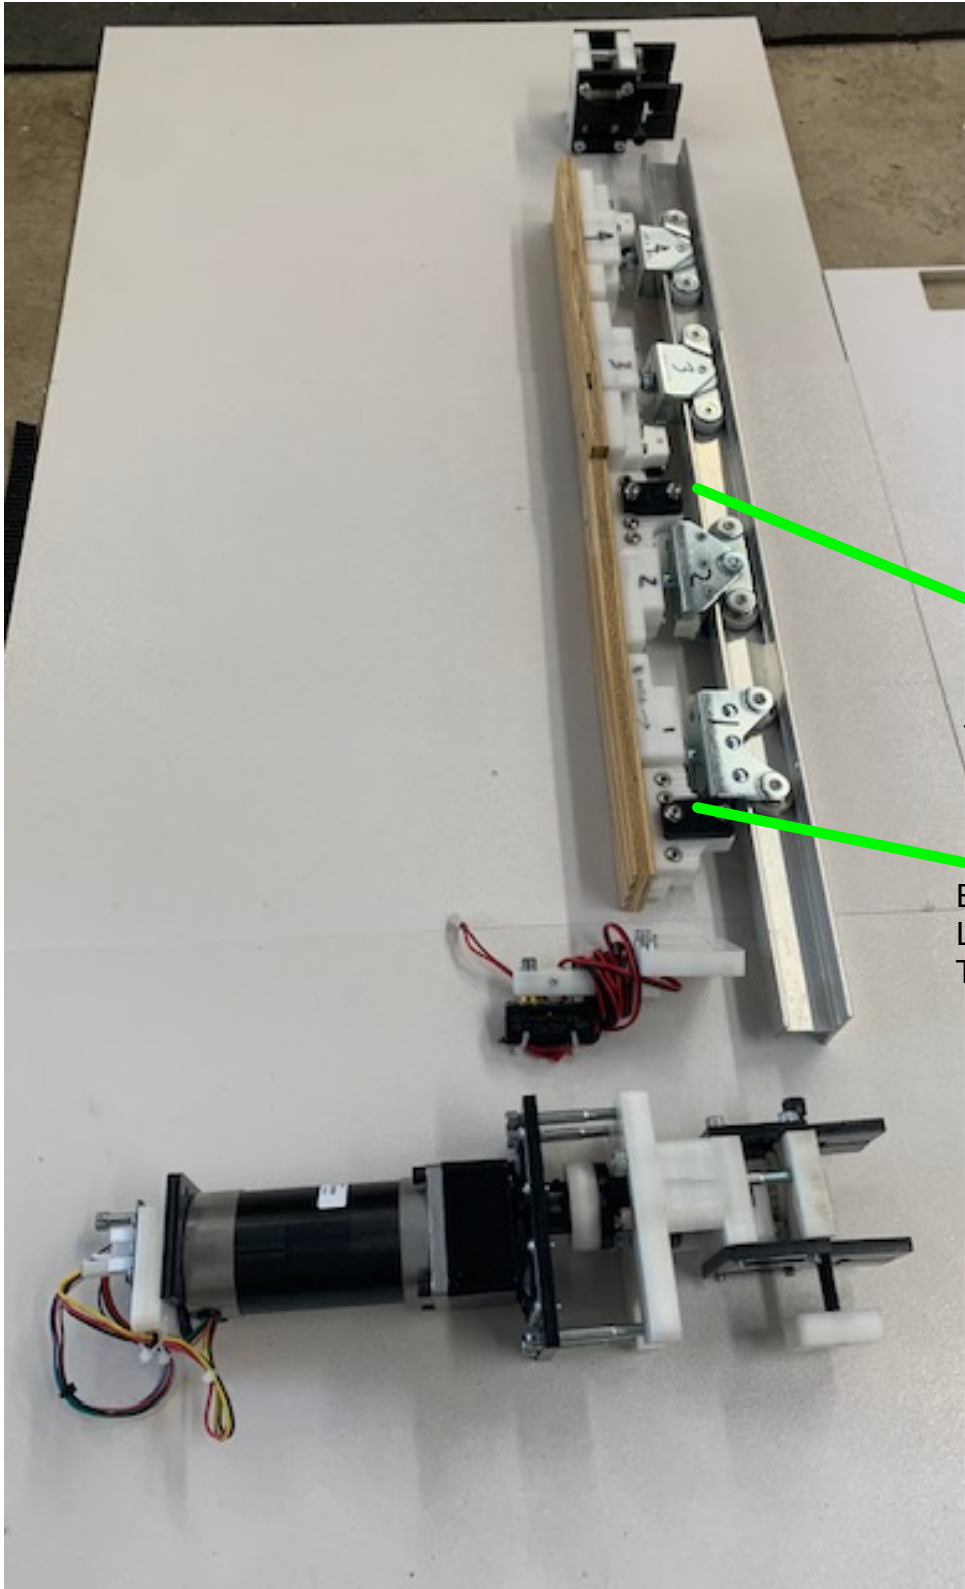



Pulley Block Side
Side
(PLAN VIEW)


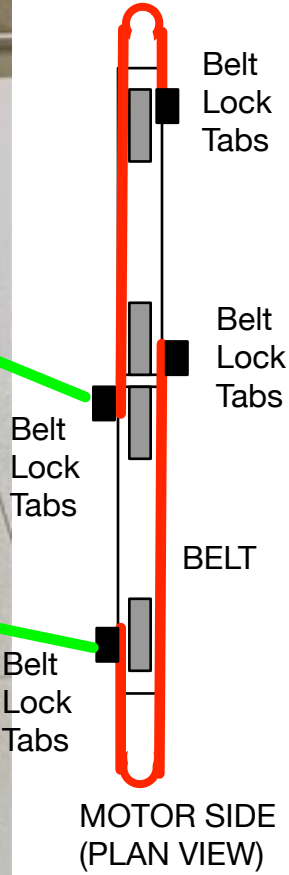


MOTOR SIDE
(PLAN VIEW)

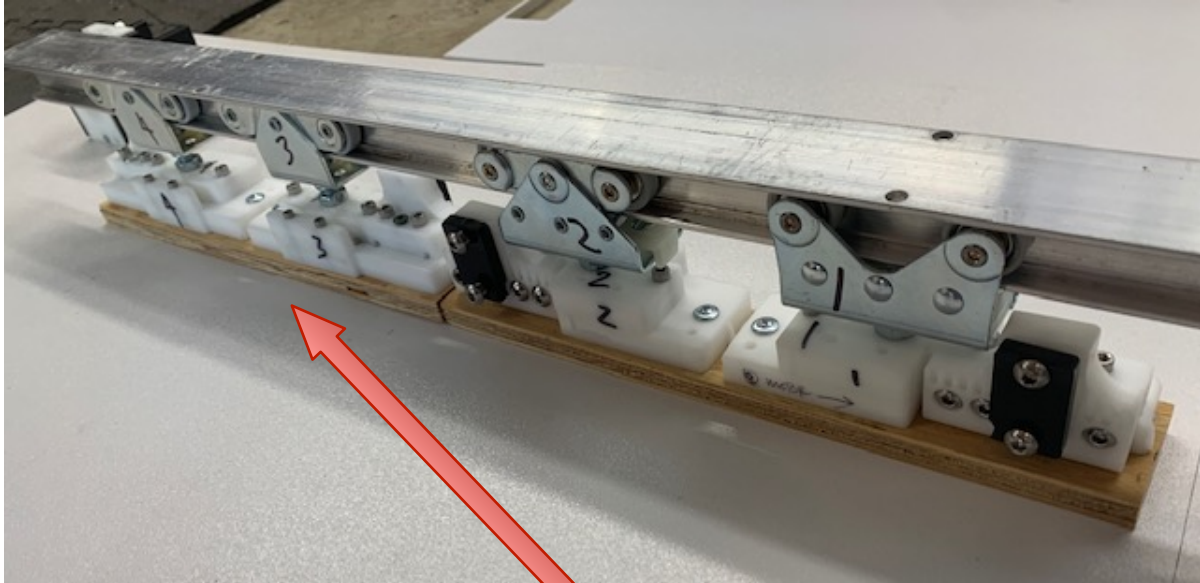



Notice that the Belt Lock Tabs are flipped on the door opposite the Motor.

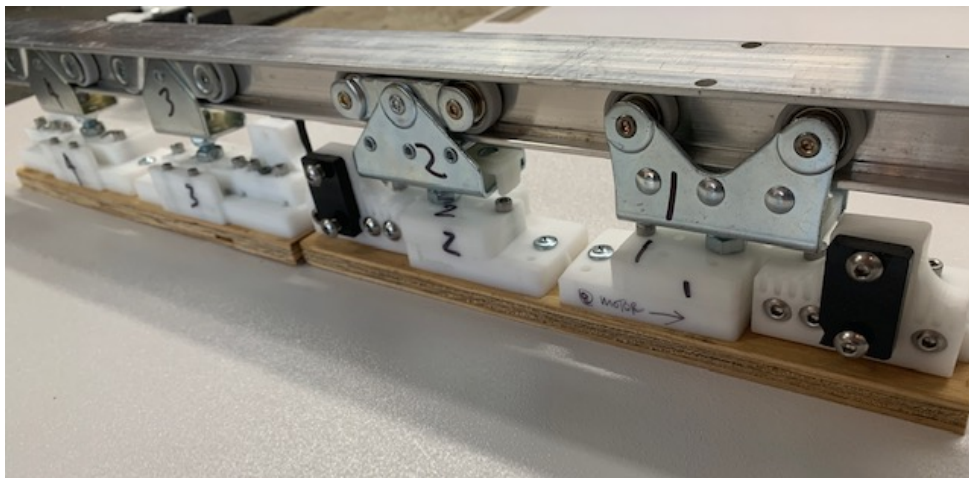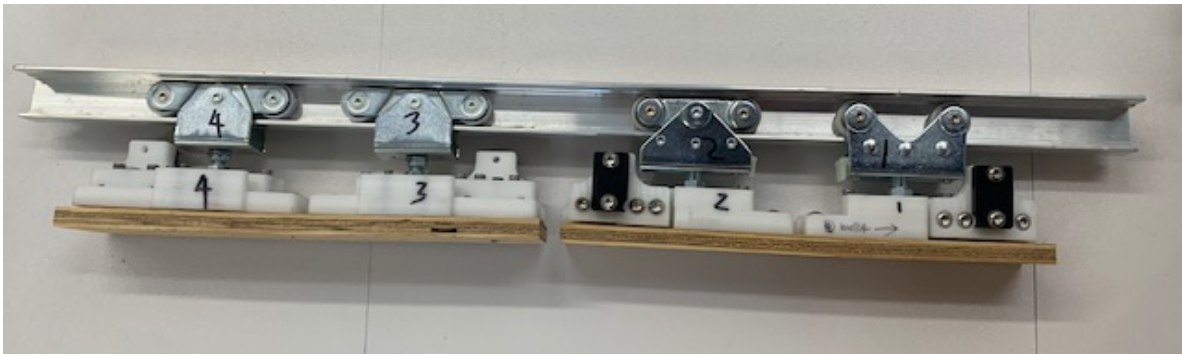

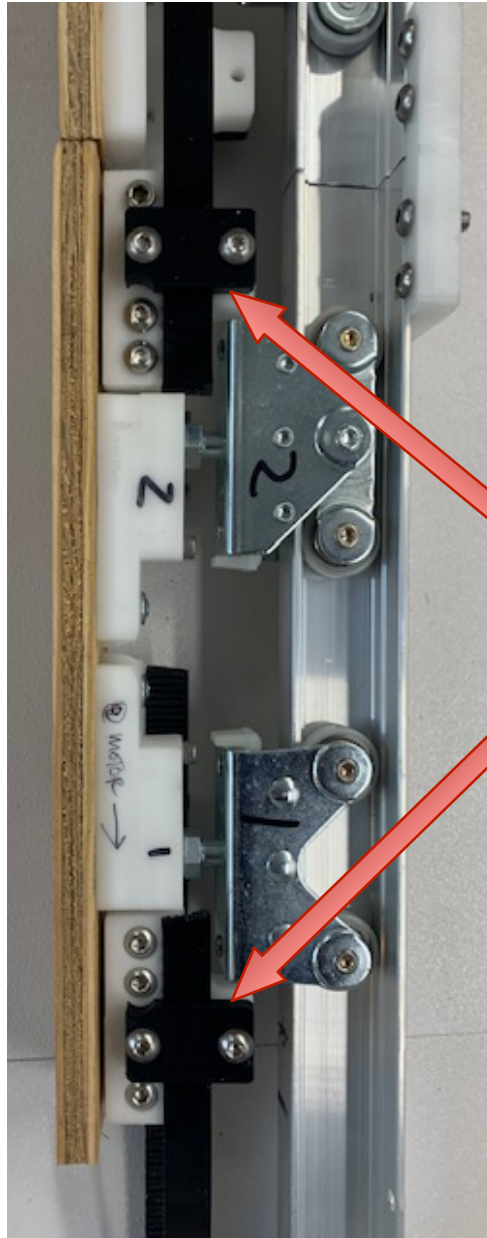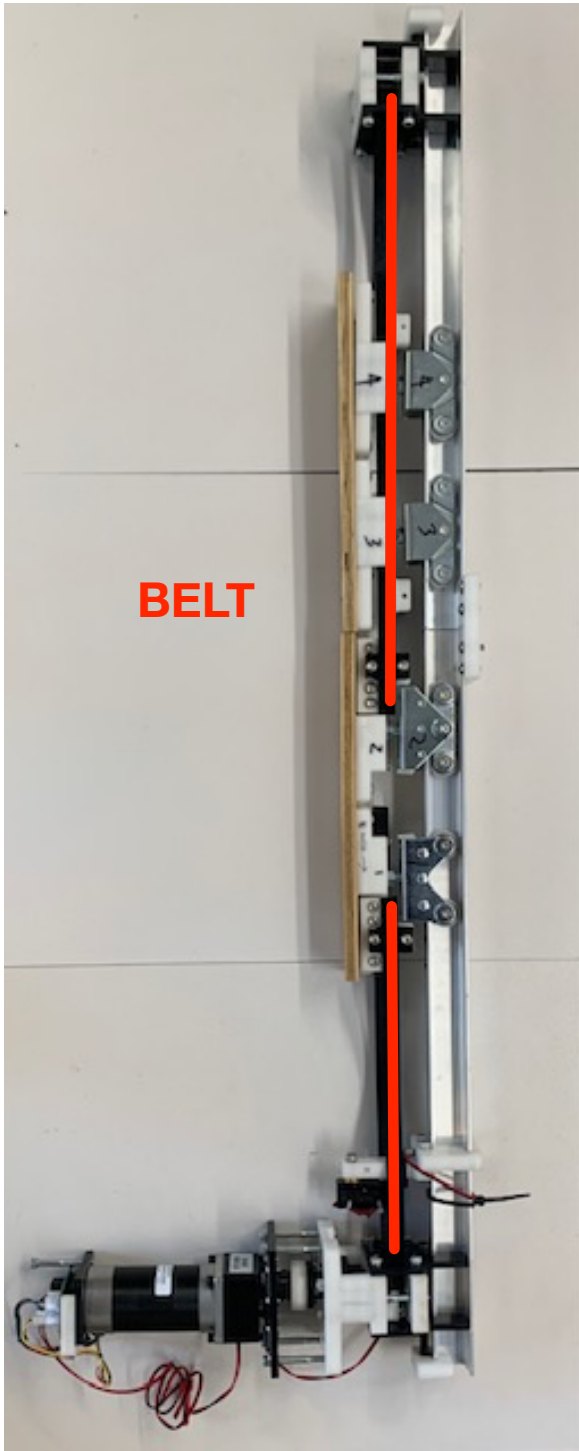


MOTOR
HERE

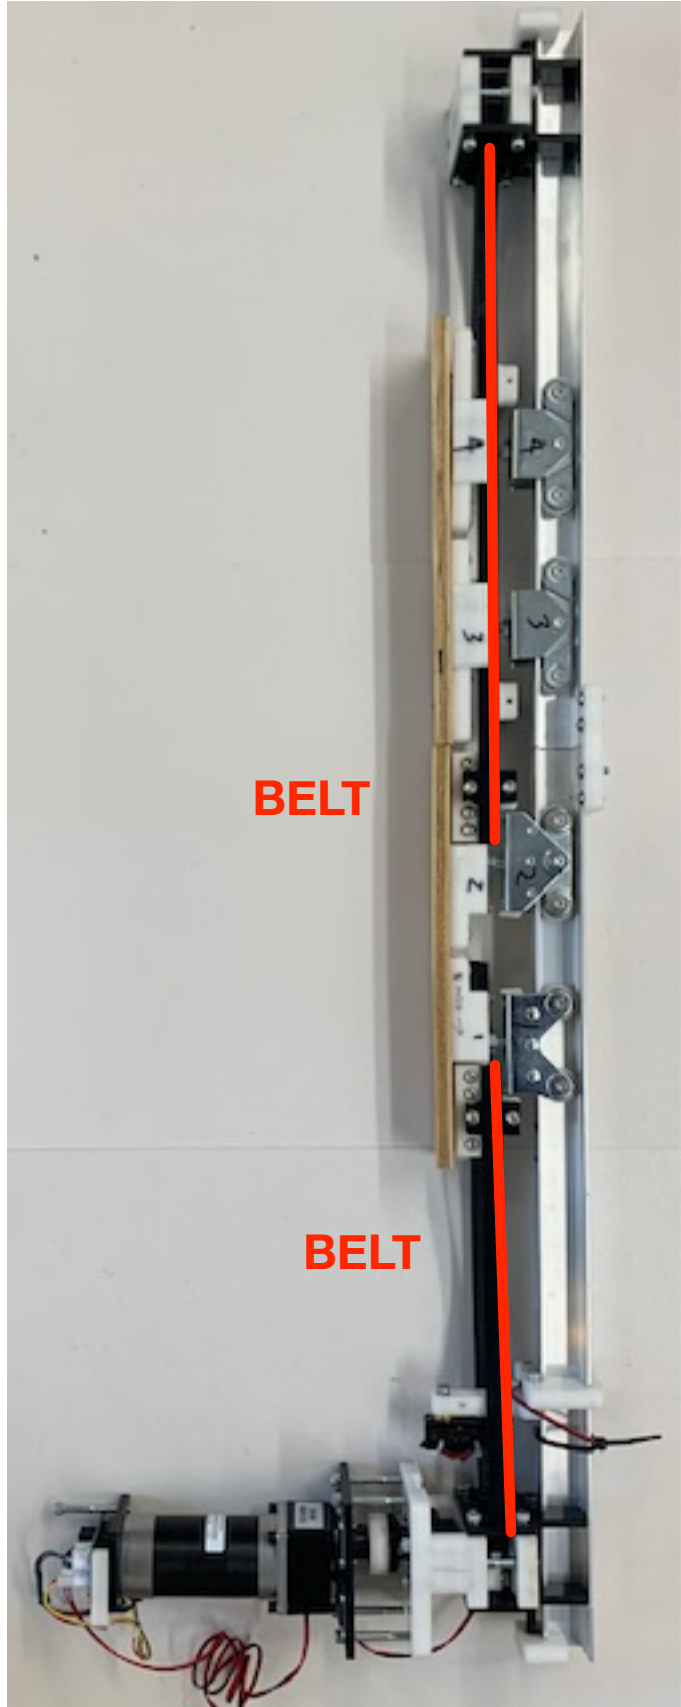

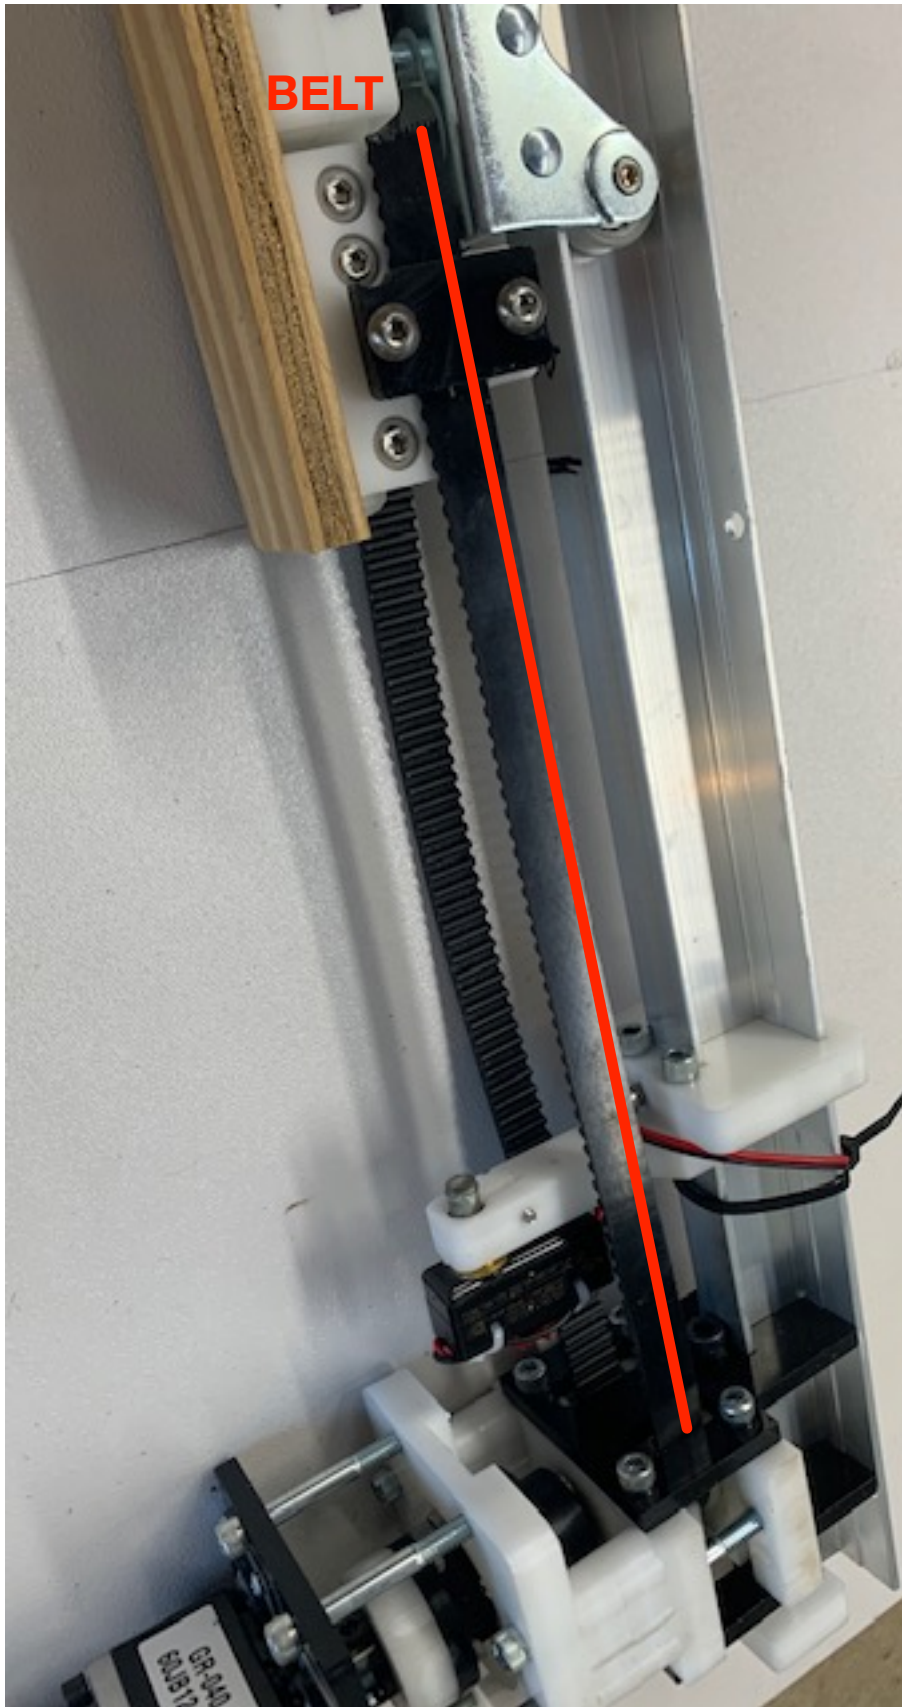


Door Clamp mounts
1.5"
from edge

Set Home Switch 1/16"
to 1/8" from edge of
door when door is
FULLY OPEN POSITION

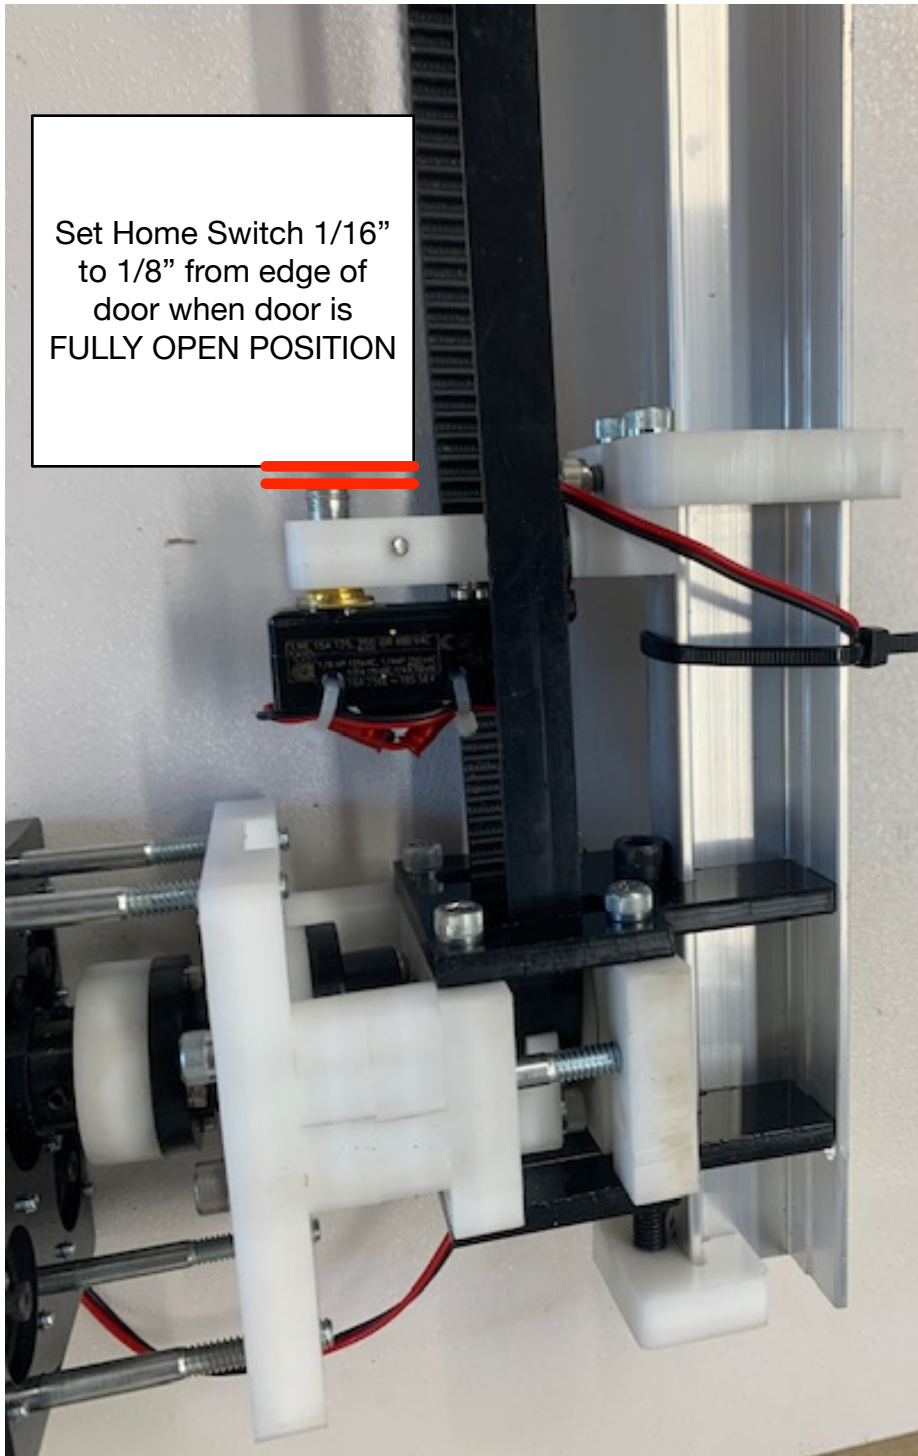


If using this type roller that inserts from the side, tighten this bolt after inserting the quick release TAB

DO NOT
ADJUST
THIS BOLT

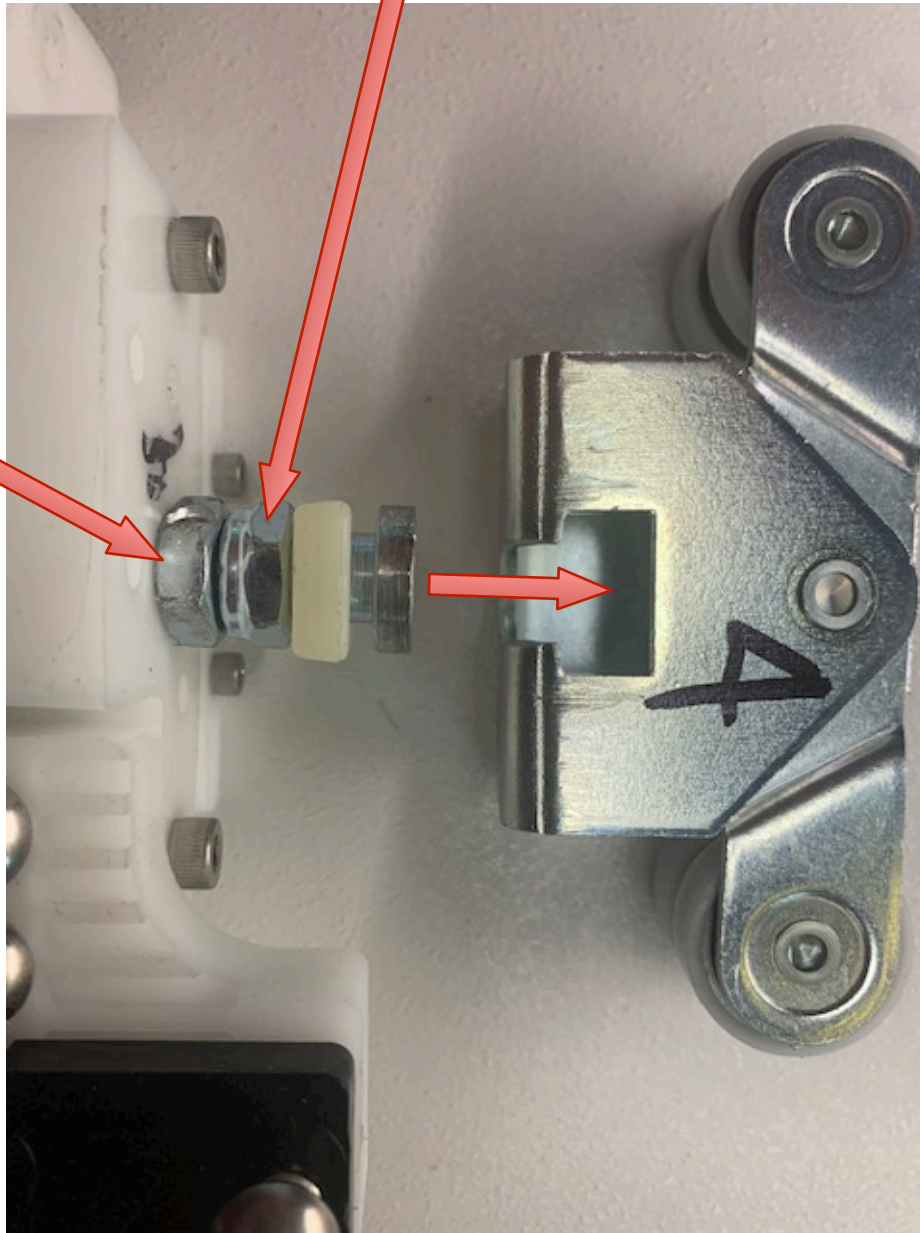


To Level the door, only adjust the nuts on the top of the threaded rods above the header, do not loosen the bolts on the door clamp or you will lose thread contact in the plastic.

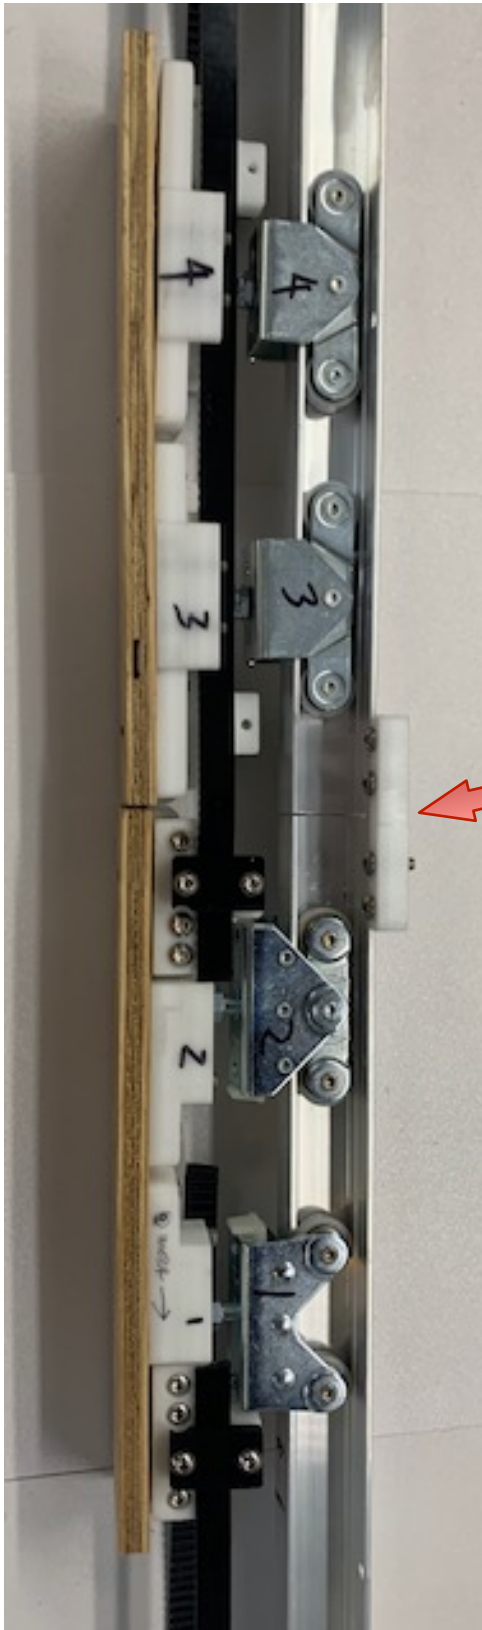


In Some cases the track is shipped in 2 pieces That require a TRACK JOINER plate to Connect the 2 pieces. The longer track usually Goes to the motor side. The TRACK JOINER Mounts dead center where the doors meet. It is Usually required to have a threaded rod attached From the TRACK JOINER to the header.

TRACK JOINER

Use the button head Screws to attach The Track Joiner To the Track the Same as the TRACK HANGER Brackets.

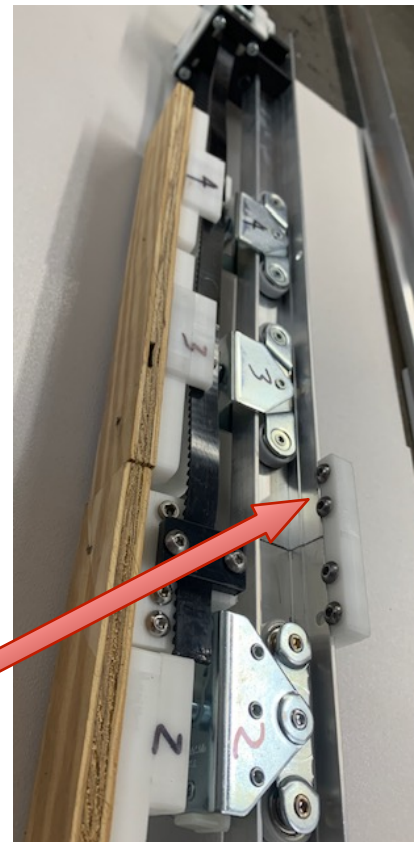

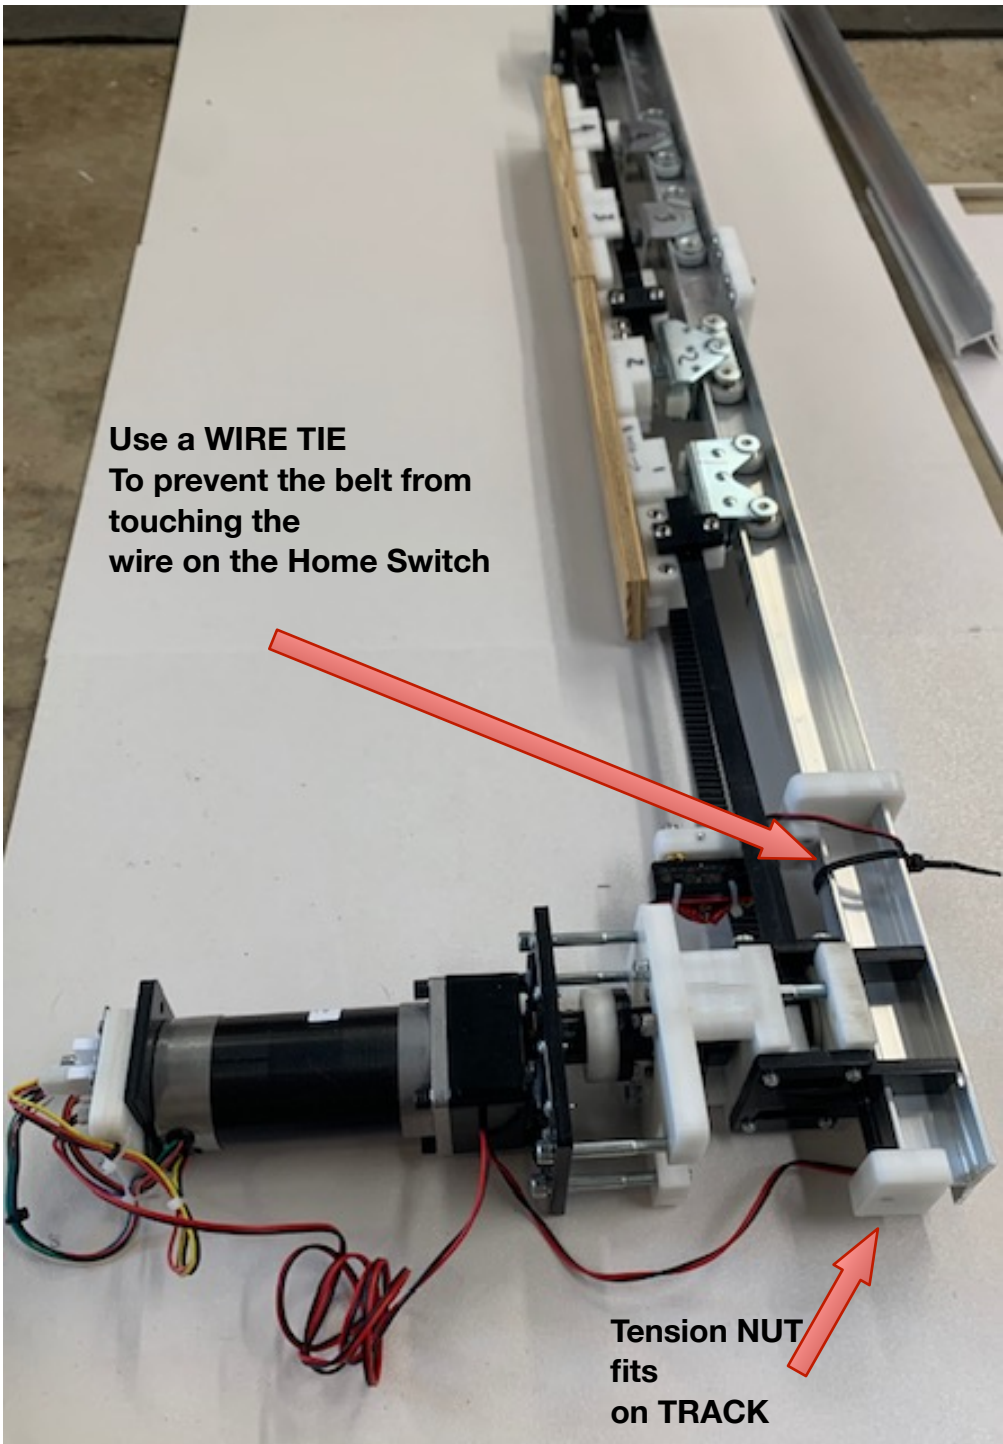

**Use a WIRE TIE
To prevent the belt from
touching the
wire on the Home Switch**

**Tension NUT
fits
on TRACK**